


### Installation & Operations Manual for Side View Mirror


#### Contents:

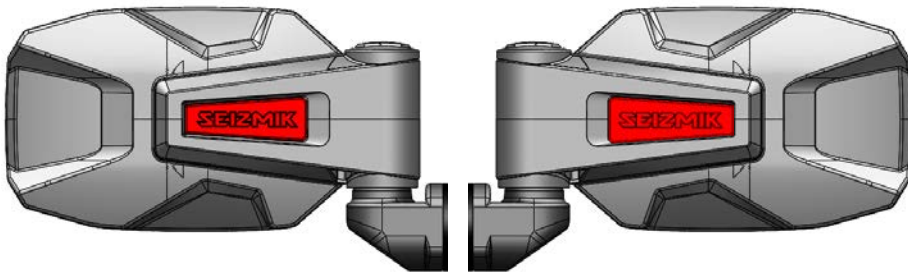

Passenger Side Mirror

Driver's Side Mirror

The SEIZMIK insert is replaceable and comes in different color kits to match your vehicle.

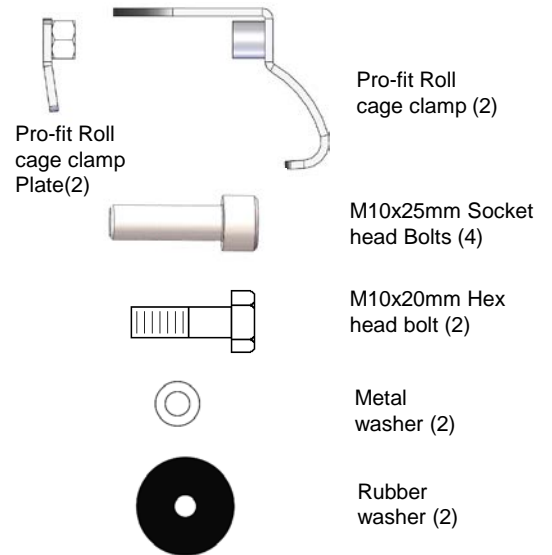

#### Installation:

- 1.** Front of vehicle

Disassemble clamp by removing the two M10x25mm socket head bolts. Place curved half of clamp against roll cage in desired mirror location. Insert bolts and thread into clamp plate with the welded nuts facing the bolt heads.
- 2.** Rubber Shim

Put M10x20mm Hex head bolt through hole and place large rubber washer on the end of the bolt.
- 3.** Bolt the mirror to the clamp but do not fully tighten yet.
- 4.** Slide mirror up or down roll cage tube to desired location. Rotate mirror on clamp to desired angle. When you are satisfied with the location and angle, tighten bolts.
- 5.** To tighten the folding feature of the mirror, tighten tension adjustment nut on the bottom of the mirror arm.
- 6.** Make the final adjustments and fully tighten mirror mounting bolt.

Seizmik makes Windshields, Doors, Tops, Hood Racks, and other great accessories for utility vehicles & side x sides. Our products are engineered tough for long life and tested under the harshest of conditions.

Seizmik products are designed, developed and manufactured by Vialink Corp. If you have any questions, comments, need assistance, or are missing parts, please call 1-866-838-3366 between 9:00AM and 5:00PM EST. You can email us at [service@seizmik.com](mailto:service@seizmik.com).